

How to replace a fluorescent lamp

1. Make sure the power to the trap is switched off
2. Grasp and rotate the fluorescent lamp 90°
3. The lamp may then be withdrawn by gently sliding out of the lamp holders. Place the lamp gently out of the way, where it cannot roll or be damaged.
4. Repeat steps 2 & 3 if the trap has more than one lamp.
5. To install the new lamp, line its prongs up with the slots in either socket. Push the lamp into the sockets, and then rotate it 90 degrees until you feel it lock into place. Repeat this step if more than one lamp.
6. Switch the power to the trap back on to ensure they are working properly.

(Hg) - Lamp contains mercury (Hg), Manage in Accord with Disposal Laws.
Consult www.lamprecycle.org or 1-800 922 6693